

TASCAM

TEAC Professional Division

D00992300B

DM-4800

DIGITAL MIXER

RELEASE NOTES V1.50

Contents

New Features	3
New Features in V 1.50	3
User Defined Layer.....	3
Registering a User Defined Layer	3
User Defined Layer screen	3
MUTE Key Function	4
Meter display	4
Windows Vista.....	5
New Features in V1.10	5
IF-FW MKII support	5
MIDI.....	5
MIDI control change message support for mixer parameters.....	5
MIDI>SETUP screen filtering.....	5
Maintenance Items.....	6
Maintenance Items in V1.50	6
Remote control	6
TASCAM FX / TASCAM FX 2.0.....	6
TASCAN FX 2.0.....	6
Maintenance Items in V1.10.....	6
Project	6
Known Issues	6
Known Issues in V1.50	6
Updating the firmware on a cascaded mixer	6
USB Connection notes.....	6
DTRS REC FUNCTION setting when controlling via P2	7
Auto detection of MMC control target.....	7

New Features

This section describes the new features for each revision of the DM-4800 software.

New Features in V 1.50

User Defined Layer

It is now possible to create a user-defined layer that freely combines the DM-4800's modules. You can control some module parameters such as Fader, Mute, Solo and Ring Encoder levels when assigned to this layer.

■ Registering a User Defined Layer

A User Defined Layer can be registered in the REMOTE>EXT.CTRL screen.

EXTERNAL CONTROL LIST					
STATE	DEVICE	ID	PORT	CH	SCREEN
→	24 USER Defined	--	INT	01-20	

There are no ID, PORT, or CH settings.

■ User Defined Layer screen

In the EXT.CTRL screen, move the cursor to the SCREEN button and press the **ENTER** key. Then use the **POD4** key to select User Defined Layer. The User Defined Layer screen will appear.

If the OPTION>PREFERENCE screen item SEL Key Follows Fader Layer Status has been checked, pressing the **REMOTE** key of the LAYER STATUS section will display the User Defined Layer.


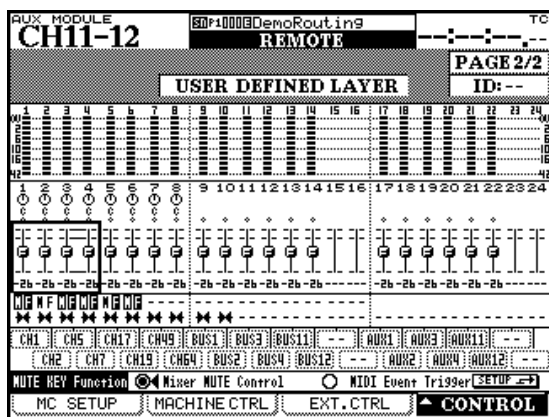


Figure 1: USER DEFINED LAYER screen

You can monitor the following functionality of the specified module.

- Meter
- Fader, pan, and mute
- Grouping settings
- Stereo link settings

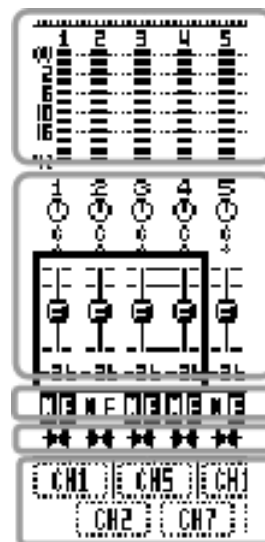

The metering point selected in the METER/FADER>METER screen is displayed.

You can also move the cursor by using the cursor keys or pressing the **SEL** key of the desired channel, and use the **POD** knobs to operate the fader or pan.

The grouping settings have the following meaning.

- : Mute group master, grouping on
- : Mute group master, grouping off
- : Fader group master, grouping on
- : Fader group master, grouping off
- : Other than group master

Only master channel is shown; slave is not shown.

The stereo link setting has the following meaning.

- : Stereo link on
- : Stereo link off

Move the cursor to the module assign section, use the **JOG/DATA** to select the module that you want to assign, and press the **ENTER** key to finalize.

You can assign channel 1-64, BUSS 1-24, and AUX1-12 modules. You cannot assign the STEREO module.

DM-4800 Release Notes

■ MUTE Key Function

You can select whether the **MUTE** keys will be used as controllers for the mixer parameter **MUTE** or as MIDI event trigger keys. If they are used as MIDI event triggers, MIDI control change messages will be transmitted.

If you want to use the **MUTE** keys as MIDI event trigger keys, move the cursor to the MUTE KEY Function section MIDI Event Trigger radio button, and press the **ENTER** key to make your selection.

MIDI control messages used as MIDI Event Triggers

In the MIDI>CtrlChg EXT screen you can specify the control change messages that will be used when using the **MUTE** keys as MIDI event trigger keys.

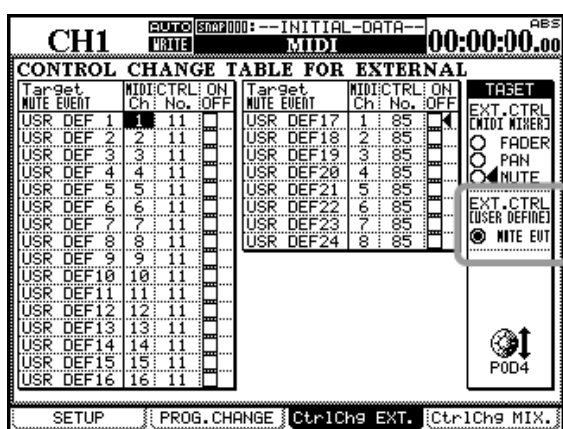


Figure 2: MIDI>CtrlChg EXT screen

You can also jump to this screen by moving the cursor to the **SETUP** button in the **MUTE** key Function section and pressing the **ENTER** key.

When the **MUTE** key is pressed, the control change message data byte 127 (7Fh) is output, and 0 (0h) when released.

MIDI>SETUP screen filtering

In conjunction with support for MIDI event triggering, a C.Chg EXT filter has been added to the USB MIDI 4: PC/CC port.

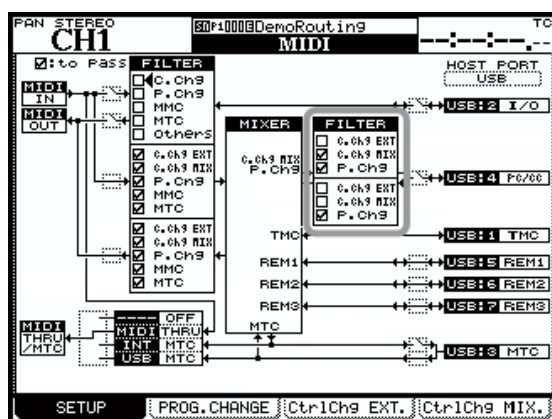


Figure 3: MIDI>SETUP screen

■ Meter display

The meter display of the User Defined Layer is also shown in the User Defined Layer screen, but can be shown in the **METER/FADER>METER** screen as well.

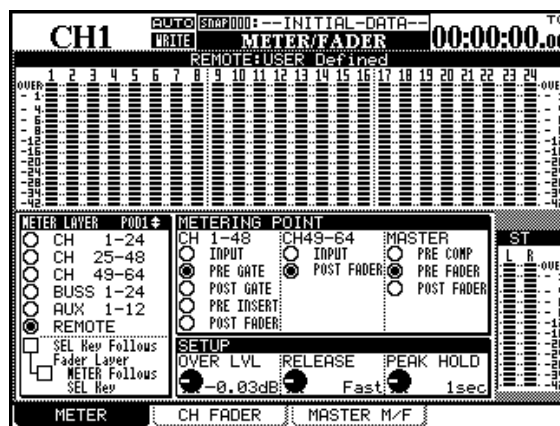


Figure 4: METER/FADER>METER screen


When you use **POD1** to move the cursor to the **REMOTE** button, and the User Defined Layer meters will appear.

Display in the meter bridge

The User Defined Layer meter display can also be shown in the separately sold MU-1000 meter unit option.

The MU-1000's metering point section does not have a **REMOTE** point.

When all LEDs in the **METER LAYER** section are dark, the **REMOTE** layer meters are shown.

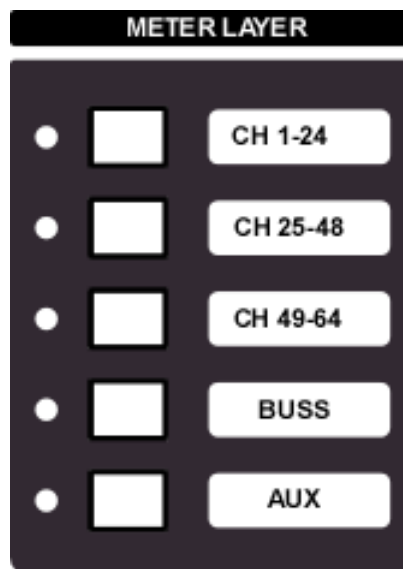

Please select the Remote Layer Meter in the **METER/FADER** -> **METER** screen. Also if you check the check box for "SEL key Follows Fader Layer Status" and "Meter Follows SEL key" on the **OPTION** -> **PREFERENCE** screen, the meter bridge will follow when you change to the **REMOTE** Fader Layer.

DM-4800 Release Notes

Windows Vista

This version of the DM-4800 is now fully supported by Windows Vista 32 bit and Vista 64 bit.

New Features in V1.10

IF-FW MKII support

When the separately sold IF-FW/DM MKII option card is installed, you can now transfer up to 32 channels of I/O (at 44.1kHz/48kHz/88.2kHz/96kHz) between your computer and the DM-4800.

For details on the IF-FW MKII, refer to the IF-FW MKII operating manual.

MIDI

■ MIDI control change message support for mixer parameters

MIDI control change messages are now supported, allowing mixer parameters (FADER, PAN, and MUTE) to be controlled.

This allows MIDI devices to be controlled in synchronization with operations on the DM-4800 mixer, or conversely for mixer parameters to be controlled from a MIDI device.

In the MIDI>CtrlChg MIX. screen, the CONTROL CHANGE TABLE FOR MIXER allows you to assign control change numbers.

CH	MIDI CTRL: ON	CH No.	OFF	TARGET
1	1	1	1	CH1-64
2	1	2	2	CH1-64
3	1	3	3	CH1-64
4	1	4	4	CH1-64
5	1	5	5	CH1-64
6	1	6	6	CH1-64
7	1	7	7	CH1-64
8	1	8	8	CH1-64
9	1	9	9	CH1-64
10	1	10	10	CH1-64
11	1	11	11	CH1-64
12	1	12	12	CH1-64
13	1	13	13	CH1-64
14	1	14	14	CH1-64
15	1	15	15	CH1-64
16	1	16	16	CH1-64

Figure 8 MIDI>CtrlChg MIX screen

By using BATCH SETUP you can make settings for all sixteen channels at once.

■ MIDI>SETUP screen filtering

In conjunction with MIDI control change support for mixer parameters, filtering has been added to the USB MIDI 4: PC/CC port.

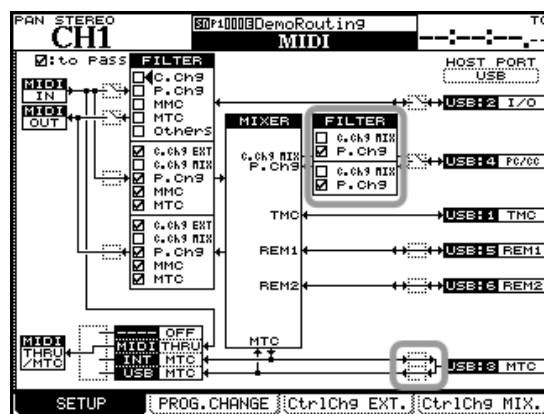


Figure 9 MIDI>SETUP screen

Until now, the input/output on/off setting for USB MIDI port 3 (used for MIDI time code) had been a single setting for input and output, but these can now be set independently.

MIDI Device Inquiry message support

When an identity request is received from the following MIDI ports of external device, the following message identify reply is transmitted.

F0 7E 00 06 02 4E 07 01 00 06 v1 v2 pp 00 F7

v1: Major version number of firmware

v2: Minor version number of firmware

pp: MIDI port ID

00: The DM-4800's MIDI IN/OUT

04: USB MIDI 4: PC/CC port

05: USB MIDI 5: USB REMOTE 1 port

06: USB MIDI 6: USB REMOTE 2 port

07: USB MIDI 7: USB REMOTE 3 port

DM-4800 Release Notes

Maintenance Items

This section describes the Maintenance items for each revision of the DM-4800 software.

Maintenance Items in V1.50

Remote control

Previously, the LCD would unexpectedly switch focus when both MIDI Faders and the DAW Control Surface feature was being used and the master fader touched.

This has been fixed.

TASCAM FX / TASCAM FX 2.0

Previously, the tap tempo function was not working for the new TASCAM FX.

This has been corrected in Version 1.50.

TASCAN FX 2.0

Previously, accessing dynamics libraries could occasionally crash the mixer.

This has been corrected in 1.50.

Maintenance Items in V1.10

Project

A problem has been fixed in which the cascade connection status sometimes became invalid when loading a project that changed the cascade master/slave relationship.

Known Issues

This section describes the Known Issues for the latest DM-4800 software

Known Issues in V1.50

Updating the firmware on a cascaded mixer

When updating the firmware on a cascaded mixer, first disconnect the cascade cable.

USB Connection notes

Mac OS X:

If TMC or your DAW software fails to find your mixer after putting your computer into Sleep mode, please remove the USB cable and re-connect it before re-launching TMC or your DAW software.

Windows XP:

If TMC or your DAW software fails to find your mixer after putting your computer into Standby mode or Hibernation mode, please re-launch TMC or your DAW software.

Windows Vista:

If TMC or your DAW software fails to find your mixer after putting your computer into Standby mode, Sleep mode or Hibernation mode, please re-launch TMC or your DAW software again.

To prevent this problem re-occurring, please set your computer to not automatically go into Standby or Hibernation modes.

DTRS REC FUNCTION setting when controlling via P2

When making REC function settings with multiple DTRS devices connected, and the REC function of track 9 or later is operated from the DTRS unit, that status is not reflected in the mixer.

Auto detection of MMC control target

When loading a project that includes MMC Full (closed-loop) control, be sure to connect and power on the MMC device first. Also, power on the MMC device before starting the mixer, otherwise the MMC device may not be correctly identified or controlled.

TASCAM

TEAC Professional Division

DM-4800

TEAC CORPORATION

Phone: +81-422-52-5082

3-7-3, Nakacho, Musashino-shi, Tokyo 180-8550, Japan

www.tascam.com

TEAC AMERICA, INC.

Phone: +1-323-726-0303

7733 Telegraph Road, Montebello, California 90640

www.tascam.com

TEAC CANADA LTD.

Phone: +1905-890-8008 Facsimile: +1905-890-9888

5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada

www.tascam.com

TEAC MEXICO, S.A. De C.V

Phone: +52-555-581-5500

Campesinos No. 184, Colonia Granjes Esmeralda, Delegacion Iztapalapa CP 09810, Mexico DF

www.tascam.com

TEAC UK LIMITED

Phone: +44-8451-302511

Unit 19 & 20, The Courtyards Hatters Lane, Watford, Hertfordshire. WD18 8TE, U.K.

www.tascam.co.uk

TEAC EUROPE GmbH

Phone: +49-611-71580

Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany

www.tascam.de
